

Vérification du débit ADSL sur le modem D-LINK DSL-124

1. Accédez à l'interface du modem via l'adresse **192.168.1.1**



2. Saisissez « **topadmin** » comme Nom d'Utilisateur et Mot de passe puis cliquez sur « **Connexion** ».
3. Cliquez sur « **STATUS** » puis allez dans « **DSL** ».

DSL-124	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP										
Device Info	ADSL ROUTER STATUS				Helpful Hints... This page displays a summary overview of your router, including system information,DSL information,LAN Configuration,DNS information,WAN Configuration and so on More...										
Wireless Clients	This page shows the current status and some basic settings of the device.														
DHCP Clients															
ADSL Driver	SYSTEM														
Statistics	<table border="1"><tr><td>Model Name</td><td>DSL-124</td></tr><tr><td>Firmware Version</td><td>TOP_1.01B1</td></tr><tr><td>Uptime</td><td>1 14:27:24</td></tr><tr><td>Date/Time</td><td>Mon Jan 2 14:27:24 2012</td></tr><tr><td>Built Date</td><td>Feb 8 2018 17:00:32</td></tr></table>					Model Name	DSL-124	Firmware Version	TOP_1.01B1	Uptime	1 14:27:24	Date/Time	Mon Jan 2 14:27:24 2012	Built Date	Feb 8 2018 17:00:32
Model Name	DSL-124														
Firmware Version	TOP_1.01B1														
Uptime	1 14:27:24														
Date/Time	Mon Jan 2 14:27:24 2012														
Built Date	Feb 8 2018 17:00:32														
Route Info	DSL														
	<table border="1"><tr><td>Operational Status</td><td>G992.5</td></tr><tr><td>Upstream Speed</td><td>1021 kbps</td></tr><tr><td>Downstream Speed</td><td>8191 kbps</td></tr></table>				Operational Status	G992.5	Upstream Speed	1021 kbps	Downstream Speed	8191 kbps					
Operational Status	G992.5														
Upstream Speed	1021 kbps														
Downstream Speed	8191 kbps														